

## Thank you for purchasing an ApplianX DPNSS-to-Q.SIG Gateway


Your order contains:

- ApplianX DPNSS-to-Q.SIG Gateway → Power cable → 1 or 2 balun(s) → Quick start guide


Follow these steps to prepare the ApplianX DPNSS-to-Q.SIG Gateway for use:

- Connect power cord to rear of chassis and plug into mains supply.


### Rear panel view

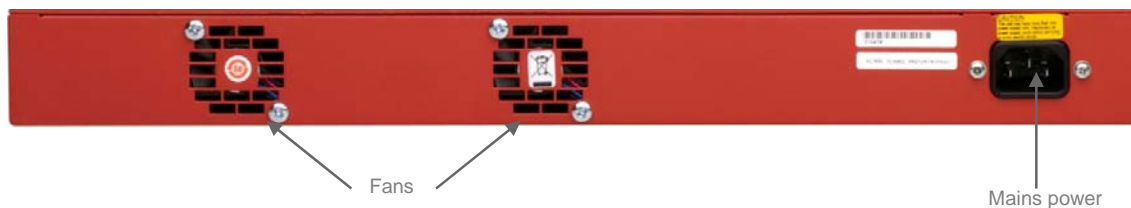

### Front panel view

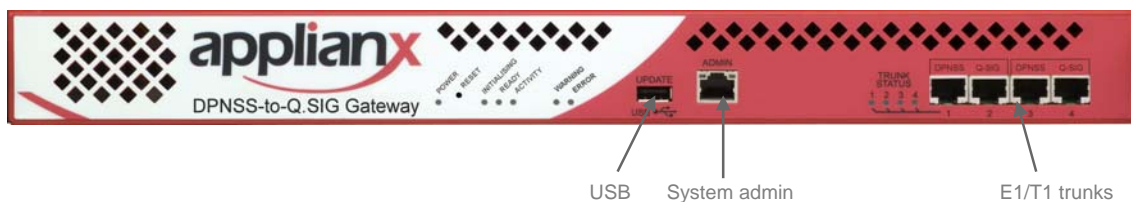

- Your ApplianX DPNSS-to-Q.SIG Gateway will light all the LEDs, one at a time, until they are all lit and then they will go out. Next, the activity light will start to flash. When the activity light stops flashing, the gateway is ready to configure.

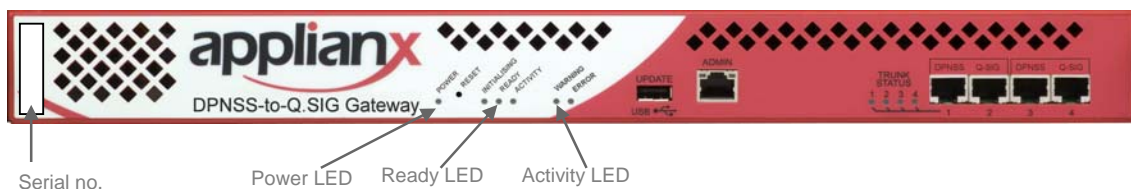

- ApplianX DPNSS-to-Q.SIG Gateway configuration is carried out using a web browser. This can be achieved by connecting the auto sensing Ethernet port of the gateway directly to a PC or by using a PC on the same network.
- To access the gateway open a web browser and navigate to axNNNNNN where NNNNNN is the serial number of the ApplianX DPNSS-to-Q.SIG Gateway. Alternatively, you can use the ApplianX Search Tool to gain access.
- Once the ApplianX DPNSS-to-Q.SIG Gateway is accessed you will be asked to set up an administration user name and password. You will then be taken through the configuration wizard. At the end of this wizard, you will be directed to the main configuration page, where you can activate your gateway. Once activated, the ready light will be illuminated.
- For more detailed instructions please see the ApplianX DPNSS-to-Q.SIG Gateway user guide, which is available from: [www.applianx.com/technical-support](http://www.applianx.com/technical-support)